

# AP40EXT(3) Installation Instructions

**WARNING: DO NOT LIFT PUMP OUT OF THE BOX USING THE SHUTTLE VALVE OR TUBING. THIS COULD CAUSE SERIOUS DAMAGE TO THE SHUTTLE.**

The AP40EXT(3) base plate is designed to be mounted with two 3/8" or two 10mm socket head cap screws spaced 2.000" apart.

Remove the base plate from the pump holding up the lever at the front of the base plate (24) while sliding the pump body (1) forward. Then lift up the pump off of the base plate.

Install base plate (24) into work station by tightening it down with two 3/8" or two 10mm socket head cap screws, screwed into previously drilled and tapped mating holes at a 2" hole distance.

Place the pump assembly (1) downward onto the posts of the base plate (24) and slide the pump body backwards until the lever on the front of the base plate drops due to gravity.

Affix PFA thick wall tubing to fluid connectors without wrenches, hand tighten only. Installation of lines is: intake on bottom; discharge on top. If pump is equipped with Synchro flare fittings, use standard flaring procedures. Take care to make sure the PFA gripper washer is in place in the nut before flaring.

Hook up 1/4" thin wall or larger orifice PFA tubing and fitting to back of shuttle valve (center NTP of 28). Air supply must be 3/16" minimum orifice (3/16" unrestricted air flow) back to supply source.

Minimum operating pressure of 20psi. Maximum operating pressure of 60psi

Adjustable mufflers are preset at the factory for optimal performance in most applications. You may "fine tune" the mufflers for optimum performance in special circumstances by loosening the lock nut outside the muffler cap. Gently screw in adjuster screw until initial contact is made with the bottom of the muffler body (do not tighten). Then back screw off to the desired setting and re tighten the lock nut while holding the screw in place to prevent further rotation. Recommended setting is to back the set screw off 1/2 turn from initial contact with muffler body bottom. AP40EXT(3) pumps come stock with non-adjustable mufflers.

**CAUTION: AIR SUPPLY MUST BE 3/16" MINIMUM ORIFICE (3/16" UNRESTRICTED AIR FLOW) FROM SUPPLY SOURCE TO PUMP.**

**Problems or Questions, call toll free:  
888.796.2476**