

INTEGRATED CIRCUIT DEVELOPMENT CORP.  
MODEL 6520  
RINSE CONTROLLER

INTEGRATED CIRCUIT DEVELOPMENT CORP.  
MODEL 968D  
DUMP RINSER

The Model 968D is a Microprocessor based Quick Dump Rinser. It is a self-contained unit that is capable of implementing several different dump rinsing techniques. It contains all of the necessary pneumatics to directly operate a standard system. Both single door and double door configurations are available.

The following is a list of the two different model numbers covered in this manual:

<u>MODEL NUMBER</u>	<u>VOLTAGE</u>
968DS (SINGLE DOOR)	24 VAC
968DSB (SINGLE DOOR)	120 VAC

Four standard programs are incorporated in the system. The program to be run is selected by the setup procedure (discussed below) and will operate under time, liquid level, resistivity or combinations thereof. This allows flexibility for mating the device to the system requirements.

The solenoids are internal to the device and are powered by the internal system power supply. The user need only provide 24 volts AC to the power terminals and the pneumatic hookups to the color coded tubing to allow the system to function. Additional features such as liquid level, resistivity, interlocks and remote Start/Stop may be wired into the terminal block as desired.

There is a two digit display on the face. During the run mode it displays the remaining cycles. During the setup mode the display will indicate a combination of alpha numeric characters to aid the user in correctly setting up the system.

**★★★ NOTICE ★★★**

**JPC CONTROLS RESERVES THE RIGHT TO MAKE CHANGES TO ITS PRODUCTS OR SPECIFICATIONS AT ANY TIME, WITHOUT NOTICE, IN ORDER TO IMPROVE THE DESIGN OR PERFORMANCE AND TO SUPPLY THE BEST POSSIBLE PRODUCT. THE INFORMATION IN THIS MANUAL HAS BEEN CAREFULLY CHECKED AND IS BELIEVED TO BE ACCURATE. HOWEVER, NO RESPONSIBILITY IS ASSUMED FOR INACCURACIES.**

\*\*\*\*\*

Four discrete LEDs are provided to indicate the current system status. They are labeled RUN, HALT, LOCKOUT and SETUP:

**RUN** - Indicates that the system is in the RUN mode and implementing the selected program. The display will indicate the number of cycles remaining.

**HALT** - Indicates the system has been temporarily stopped.

**LOCKOUT** - Indicates that a switch closure has occurred on one of the two interlock circuits. This will terminate the Dump Rinser cycle prematurely and stop the system regardless of the current conditions.

**SETUP** - Indicates that the system is in the SETUP mode. In this mode the system parameters are selected. (see below)

\*\*\*\*\*

The six keys marked: START, STOP/RESET, SETUP, OPEN, UP AND DOWN are used to operate and program the unit. The following is a listing of each of the keys and their functions:

**START** - This key is used to activate the Dump Rinser. It will start the system if it is reset, or it will continue if the system has been placed in HALT (see STOP/RESET).

**STOP/RESET** - This is a multifunction key. Its function varies with the current system mode.

RUN MODE - If the system is in the RUN mode but has not completed all of the cycles, depressing STOP/RESET will place the system in the HALT condition. This simply stops the program and holds it until restarted by the START key or Reset as described below.

HALT MODE - If the system has been placed in the HALT mode by a single depression of the STOP/RESET key, depressing the key again will reset the system.

SETUP MODE - If the system is in the SETUP mode, depressing the key will cause the system to return to the RESET state in preparation for a new cycle run.

**SETUP** - This key is used to put the system into the SETUP mode and advance through the parameters.

Depressing the key once will place the unit in the SETUP mode. (Note: if access code protection is selected, an additional step is required, see Access Code below). Depressing the key after entering the SETUP mode will allow the user to scroll through the setup parameters. (see SETUP).

**UP** - In the SETUP mode, depressing the UP will cause the display to advance. Depressing the key once and releasing will allow the accurate setting of the least significant digit. Holding the key down will activate the automatic, rapid incrementing of the display.

**DOWN** - In the SETUP mode, depressing the DOWN will cause the display to decrease. Depressing the key once and releasing will allow the accurate setting of the least significant digit. Holding the key down will activate the automatic, rapid decrementing of the display.

**OPEN** - This key is used to manually dump the tank. When it is depressed, the appropriate solenoid is activated and the tank is dumped. The door is closed by depressing the key a second time.

When the door closes, the unit goes into 'AF' (Auto Fill) and refills the tank. To close the door without an 'AF', depress the STOP/RESET key.

**SETUP** - The controller may be configured to implement various dump rinsing techniques. The SETUP mode allows the user to both adjust and program the unit. The following is a listing of the Code Prompts that will appear in the display when in the SETUP mode. The code will alternately flash with the selected value to indicate to the user the parameter that is currently being viewed or set.

<u>CODE</u>	<u>DESCRIPTION</u>
CY	Number of Cycles
RC	Number of Reclaimed Cycles (double door only)
FP	Fill Period (Time Programs Only)
DP	Drain Period
DD	Dump Delay
SD	Start Delay
AD	Auto Dump Period
N2	Bubbler
AC	Access Code
PC	Period Count
PN	Program Number
RP	Reclaim Position (double door only)

<u>CODE</u>	<u>SETTING RANGE</u>
CY	0 TO 99 Cycles
RC	0 TO 99 Cycles
FP	0 TO 99 seconds
DP	0 to 99 seconds
DD	0 to 99 Seconds
SD	0 to 99 Seconds
AD	0 to 99 Minutes
N2	Y-Yes/N-No
AC	0 to 99
PC	L=Long (min) S=Short (sec)
PN	0 to 3
RP	F=First L=Last

All of the codes do not appear on every unit. If the item does not apply it is automatically removed from the stack. For example, FP is only used with Programs 0 and 1. Thus, when PN is selected as 2 or 3 the FP setting disappears from the stack.

The 'PC' selection will determine whether the Fill Period (FP) and Start Delay (SD) are counted in minutes or seconds. If it is set to "L", (LONG) it will count in minutes. If it is set to "S" (SHORT), it will count in seconds.

To exit the SETUP mode, the RESET key is depressed. When exiting, the unit automatically enters a SAVE mode. This causes the parameters to be written into the EEPROM memory. This is a permanent (10 year minimum life) memory that does not require battery backup.

The RP parameter (only used in double door units) allows the selection of the RECLAIM cycles as either the first or the last cycles in the sequence of operation.

\*\*\*\*\*

**OPERATION** - The Dump Rinser functions are directly controlled by the setup parameters and the program selected. All of the programs use a DUMP period. This is the amount of time that the Dump Door is open. The technique used to determine when the tank is full varies between the programs.

Programs 0 to 1 use a Timed Fill. In this case, the FP (fill period) parameter is set to a specific number of minutes or seconds. The program will then activate the fill valve for that period of time and then proceed into the DUMP cycle. (Note the fill solenoid remains on throughout the complete run.)

When using Programs 2 and 3 a liquid level signal is used to terminate the FILL cycle. In these programs, the unit will go into the FILL cycle and remain in FILL until a closure occurs on the liquid level input.

A Resistivity override may be used with either the Time Fill or Liquid Level Fill Program. Programs 1 and 3 are special versions of the Time and Liquid Level routines just described, with the additional feature that the Resistivity input is examined at the end of each fill period. If there is a closure on the resistivity input at this time, the system stops the cycle and indicates to the operator that rinsing is complete.

<u>PROGRAM NUMBER</u>	<u>FUNCTION</u>
0	Timed Fill
1	Timed Fill with Resistivity Override
2	Liquid Level Fill
3	Liquid Level Fill with Resistivity Override

On Double Door Units, the number of RECLAIM cycles (RC) is programmable. If this parameter is set to 0, the unit will function as a Single Door Dump Rinser. If a number other than 0 is programmed into this parameter, the DUMP cycles will be split between the first and second doors.

The RP (Reclaim Position) parameter determines whether the RECLAIM cycles will be the first or the last cycles in the sequence. If RP is set to 'F', then the first RC cycles will dump through door number 2 and the remaining CY-RC cycles will dump through door number 1. If RP is programmed to 'L', the first CY-RC cycles will dump through door number 1 and the last RC cycles will dump through door number 2.

With any of the programs, the N2 option may be selected. When N2 is selected the N2 bubbler solenoid will be activated during the entire cycle run.

There are two programmable delays that may affect the system operation. In the SETUP mode, the DUMP delay may be used to add a fixed amount of time to the end of the fill period. The system would operate as described above except that the dump would not be immediately initiated, but would be delayed by a preset number of seconds.

Additionally, a delay may be inserted via the SD (Start Delay) function. When the START key is first depressed, the controller will enter the RUN mode, but the RUN LED will flash to indicate that there is a start delay being counted down. Once the delay has been completed, the RUN LED will go fully on and the system will proceed to operate as described above.

If a time other than 00 is programmed into the AD (Automatic Dump) parameter, an internal timer will automatically accumulate the time that has elapsed since the last run. If this time accumulates to the programmed number of minutes, the unit will automatically perform one dump cycle.

The unit contains an AUTOMATIC FILL feature. If the manual 'OPEN' switch is utilized, the tank will automatically fill when the door is closed. The 'OPEN' key may be utilized to manually drain the system when not in the Automatic Operating Modes.



In some cases, it may be desirable to restrict access to the Setup mode. Thus, an access code system is incorporated. If the AC (access code) is set to 00, the function is eliminated and the system operates as previously described.

The Access code is simply any number from 1 to 99 as programmed into the system by the customer's authorized personnel. Once this code is entered into the EEPROM, any attempt to enter the SET mode will cause "CD" to appear in the data display. The UP and DOWN keys are then used to enter the access code. Once the proper code has been selected, the user simply depresses the SET key once again to gain entry into the SETUP stack. Any other entry, the wrong code number, or no action for 30 seconds will return the unit to the normal mode.

**BACKDOOR CODE**

A special code has been incorporated into the software to insure factory access to all functions no matter what the customer has done with the access codes. This code is 99.

**MANUAL REVISIONS**

<b><u>Revision #</u></b>	<b><u>Eng #</u></b>	<b><u>Program #</u></b>	<b><u>Revision Made</u></b>
Rev 4	DT968D	DT968DGA	Upgraded Mcroprocessor

**LIMITED WARRANTY**

**WARRANTY:** JPC CONTROLS WARRANTS ITS NEW PRODUCTS TO BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP UNDER THE SERVICE FOR WHICH THEY ARE INTENDED. THIS WARRANTY IS EFFECTIVE FOR TWELVE MONTHS FROM THE DATE OF SHIPMENT.

**EXCLUSIONS:** THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

**JPC CONTROLS IS NOT LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

**NO PERSON OTHER THAN AN OFFICER IS AUTHORIZED TO GIVE ANY OTHER WARRANTY OR ASSUME ANY LIABILITY.**

**REMEDIES:** THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY SHALL BE: (1) THE REPAIR OR REPLACEMENT OF DEFECTIVE PARTS OR PRODUCTS, WITHOUT CHARGE. (2) AT THE OPTION OF JPC CONTROLS, THE REFUND OF THE PURCHASE PRICE.

## SPECIFICATIONS

### MODEL 968DS QUICK DUMP RINSER


RANGE	0 - 99 Cycles
RESOLUTION	1 Cycle
DISPLAY	Two, 0.8 Inch High, Seven Segment, LED Uniplanar numerals. Four Discrete LEDs (Red, Green, Amber).
ANNUNCIATOR	Audio Tone, - 3200 HZ
SETUP MEMORY	EEPROM, All Parameters
MEMORY RETENTION	10 Years w/o Power
OPERATING RANGE	0 to 50 Degrees C
STORAGE RANGE	-40 to 60 Degrees C
CONSTRUCTION	Enclosure - Kydex. Face - Lexan, Back Printed
SIZE	7 x 3 x 5.25 inches (HxWxD) 178 x 76 x 133mm
WEIGHT	< 4 Lbs. (1.8 kg)
CONNECTION	Pneumatic - Rear, Tubing, 1/16" ID, PVC, Color Coded  Electrical - Rear, Screw-Type, 3/8 inch centers
OUTPUT	Pneumatic Solenoid, Internal, 100 PSIG Max.  BUZ - Transistor, Open Collector, 100 MA, 12VDC.
POWER	10 VA, 24 VAC +10%, 50/60 HZ

## SPECIFICATIONS

### MODEL 968DSB QUICK DUMP RINSER

RANGE	0 - 99 Cycles
RESOLUTION	1 Cycle
DISPLAY	Two, 0.8 Inch High, Seven Segment, LED Uniplanar numerals. Four Discrete LEDs (Red, Green, Amber).
ANNUNCIATOR	Audio Tone, ~ 3200 HZ
SETUP MEMORY	EEPROM, All Parameters
MEMORY RETENTION	10 Years w/o Power
OPERATING RANGE	0 to 50 Degrees C
STORAGE RANGE	-40 to 60 Degrees C
CONSTRUCTION	Enclosure - Kydex. Face - Lexan, Back Printed
SIZE	7 x 3 x 5.25 inches (HxWxD) 178 x 76 x 133mm
WEIGHT	< 4 Lbs. (1.8 kg)
CONNECTION	Pneumatic - Rear, Tubing, 1/16" ID, PVC, Color Coded  Electrical - Rear, Screw-Type, 3/8 inch centers
OUTPUT	Pneumatic Solenoid, Internal, 100 PSIG Max.  BUZ - Transistor, Open Collector, 100 MA, 12VDC.
POWER	10 VA, 120 VAC +10%, 50/60 HZ

SUPPLY GREEN  
 OPEN WHITE  
 CLOSE RED  
 N2 YELLOW  
 SPRAY BLUE

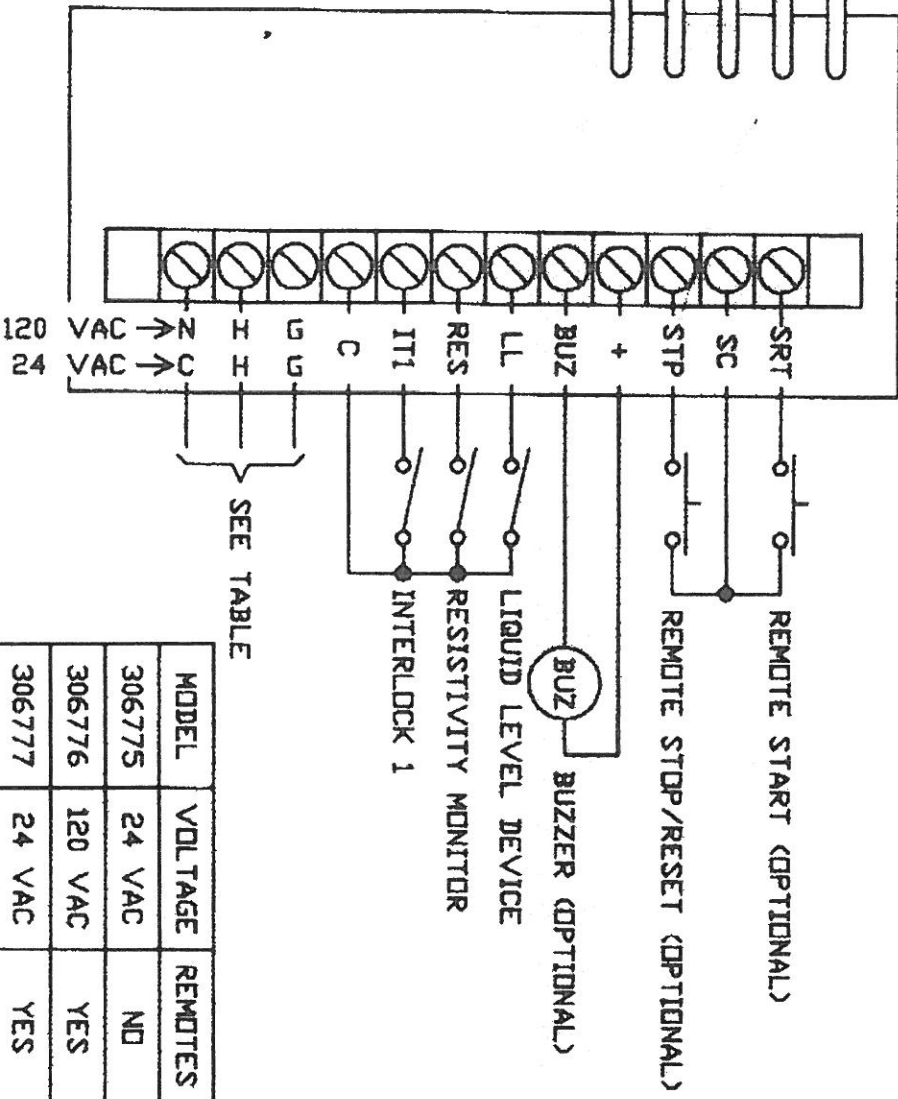

MODEL	VOLTAGE	REMOTES
306775	24 VAC	NO
306776	120 VAC	YES
306777	24 VAC	YES

NOTE:  
 + TERMINAL RATED 12 - 20 VDC  
 UNREGULATED (100mA).

TOLERANCES UNLESS OTHERWISE SPECIFIED

JPC CONTROLS A DIVISION OF LLOYD INDUSTRIES, INC.

ICD 6520 RINSE CONTROLLER REAR PANEL

ALL DIMENSIONS ARE IN INCHES		APPROVAL		DRAWN		PARTS/23/01/SCALE NONE		ICD			
PART - EXCC\UTS60N\3600S\RDVIG		DES	DATE	BY	DATE	SHEET	1 OF 1	13	0968119	10	00